


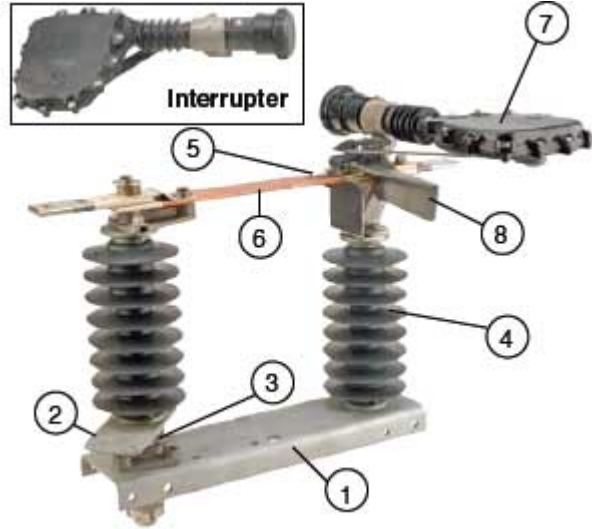

Sectionneur 29kV 900 amp
Num: AR116SS



A R 1 X X X X X X X X X X X X

<p>Position 1: Configuration</p> <p>1 = Horizontal 2 = Vertical 3 = Ø-over-Ø 4 = Delta 5 = Inverted</p>	<p>Position 2: Insulation, kV Impulse (maximum system kV)</p> <p>1 = 110 porcelain (17.1kV) 3 = 110 polymer (17.1kV) 4 = 150 polymer (29kV) 6 = 150 polymer (38kV grounded-wye) 7 = 150 polymer Long Leak (39.6") (38kV grounded-wye)</p>	<p>Position 3: Crossarm/Inter-Phase Shaft</p> <p>S = Steel F = Fiberglass M = Steel crossarm, fiberglass interphase shaft</p>	<p>Position 4: Standard Controls — Pipe sizes on drawings, pages 14A-4 thru -8 (All configurations)</p> <p>S = All Steel Vertical Sections F = One Fiberglass Vertical Section H = Vertical Controls replaced with Hook stick Operating Mechanism</p> <p>Heavy-Duty Controls — 1¼" IPS (Vertical and Ø-over-Ø only)</p> <p>T = All Steel Vertical Sections G = One Fiberglass Vertical Section</p>
<p>Positions 5 through 12: See Option Tables for each Configuration</p>			

*To specify Offset Control, add 0116 as a suffix after building a complete Catalog Number for all other features.

**SECTIONNEUR CHANCE /
CHANCE SWITCH**

Protection